



Xede Wiring Diagram – 2007 Landcruiser 200 series 2UZ-FE


Wiring Details:

Note: Connectors are drawn as seen from the wire side.


XEDE Configuration:	S
XEDE Revisions:	All
XEDE Harness:	XH-WBG (Generic Harness)
Special Notes / Information:	See Diagram Over Page

Air Injection Controller

Beside relay box LH inner guard
Also black wire (large) ECU plug A52 Pin 2 or Pin 3

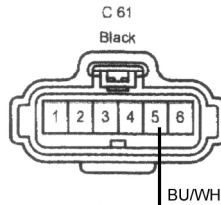

- * ONE OR BOTH OF THE CHASSIS GROUNDS MUST BE CONNECTED IF ANY OF THE FOLLOWING XEDE FEATURES ARE BEING USED:
- WATER SPRAY
 - BOOST CONTROL
 - AUXILIARY INJECTOR DRIVE
- ** Red wire in 3 core shielded cable. DO NOT terminate the shield wire in the 3 core cable
ALL unused wires should be properly terminated and secured

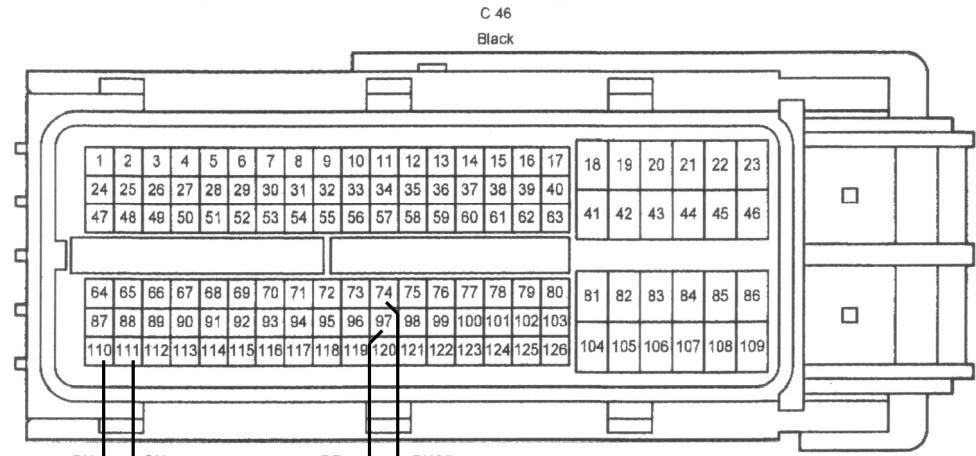

**** SPECIAL NOTE****
Several brown wires on this connector, make sure to get the right one.

