



# Xede Wiring Diagram

## Toyota Hilux 4.0L V6 TRD or Aftermarket Supercharger Kit

(non factory fitted TRD supercharger or Rotrex)

### Wiring Details:

Note: Connectors are drawn as seen from the wire side.

XEDE Configuration:	S
XEDE Revisions:	All
XEDE Harness:	XH-WBG (Generic Harness)
Special Notes / Information:	See Diagram Over Page

\* One or both of the chassis grounds must be connected if any of the following XEDE features are to be used: Water spray, Boost control, Auxiliary injector drive.


\*\* Red wire in 3 core shielded cable

**DO NOT terminate the shield wire in the 3 core cable.**

**There are 2 black wires, DO NOT use the black wire from the shielded cable unless specifically instructed.**

## ECU Terminals

View from back of connectors  
(wire view)

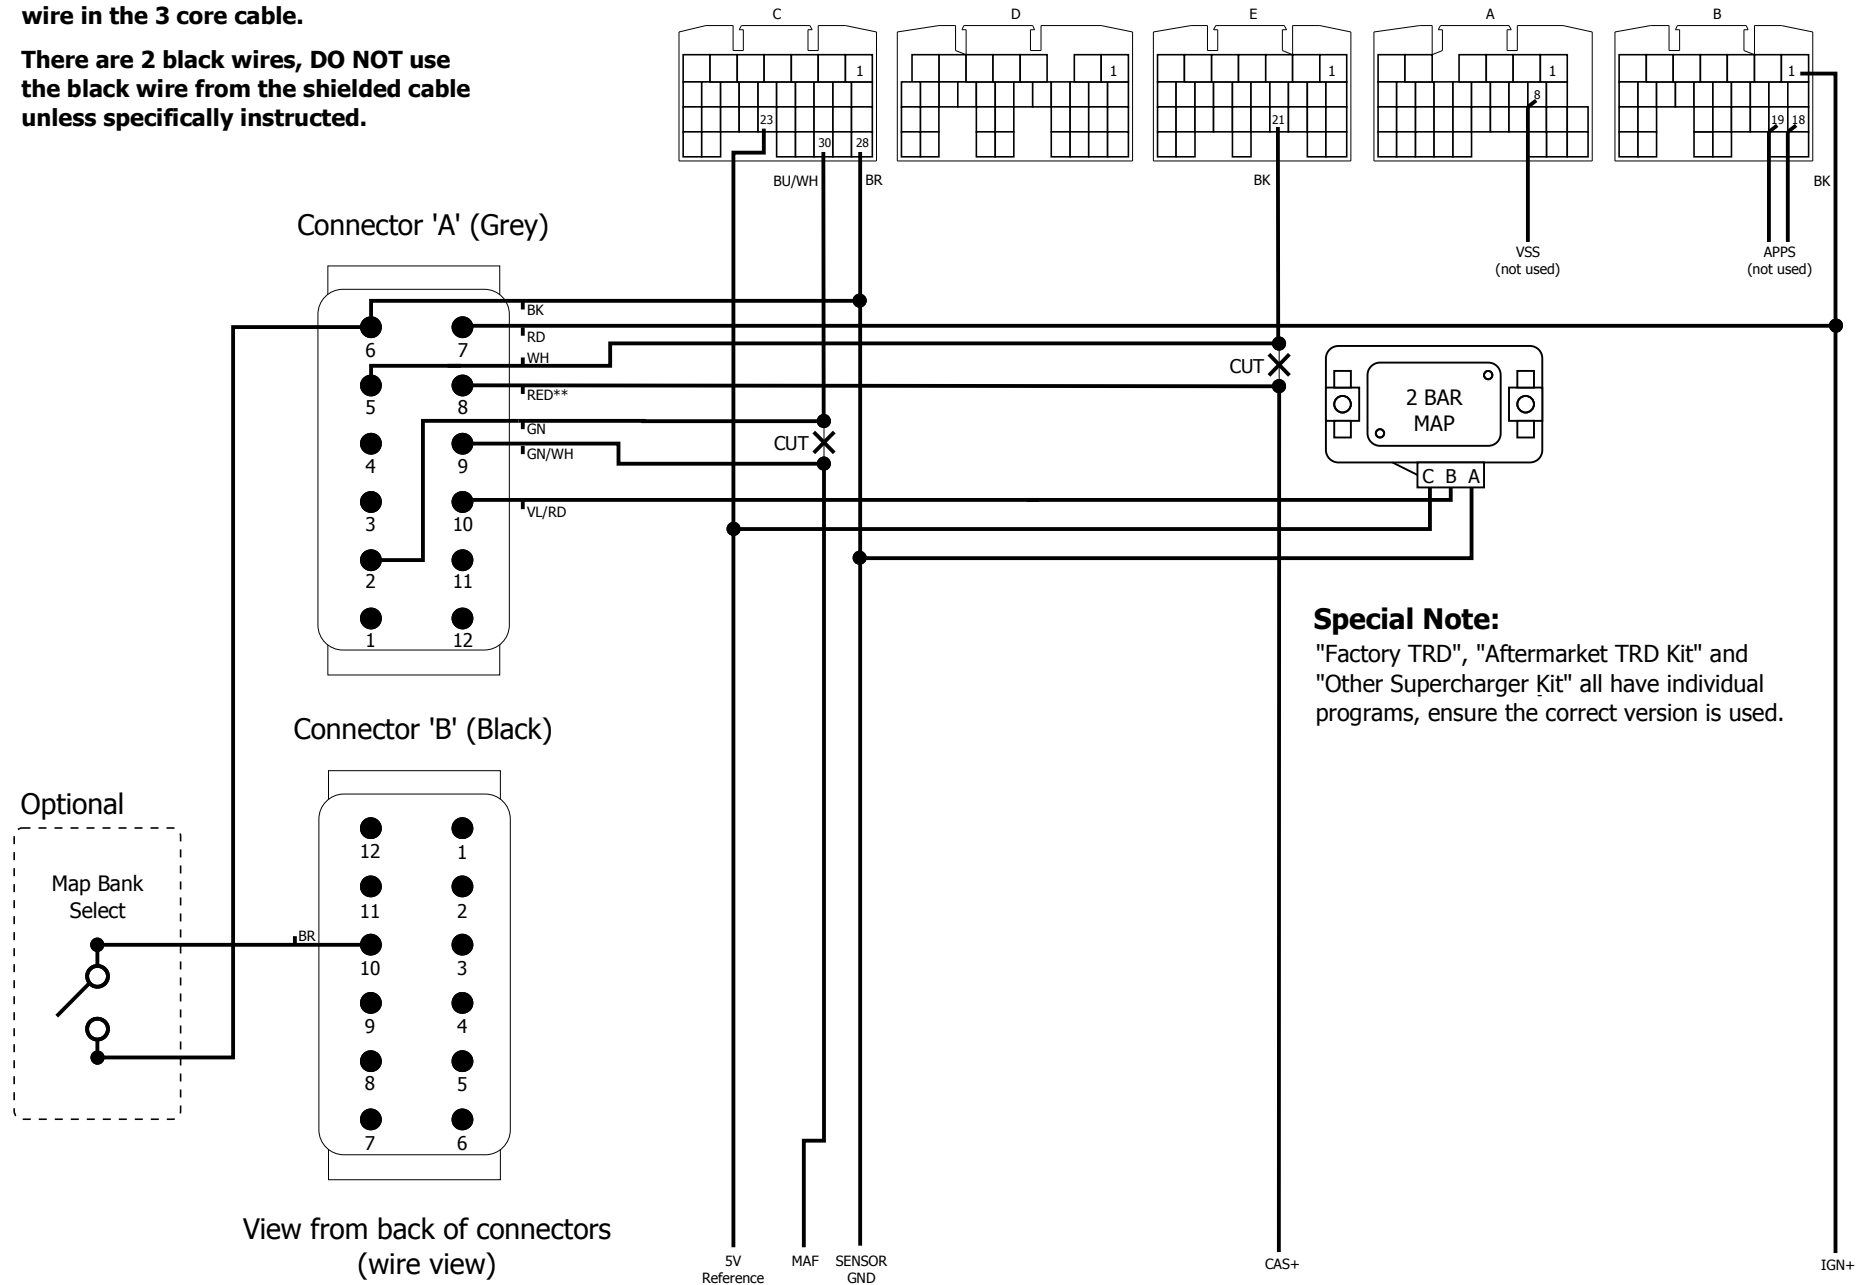

**Special Note:**  
 "Factory TRD", "Aftermarket TRD Kit" and "Other Supercharger Kit" all have individual programs, ensure the correct version is used.