


# Xede Wiring Diagram – 1997-1998 Subaru WRX

## Wiring Details:

Note: Connectors are drawn as seen from the wire side.

|                                   |                          |
|-----------------------------------|--------------------------|
| <b><i>XEDE</i></b> Configuration: | S                        |
| <b><i>XEDE</i></b> Revisions:     | All                      |
| <b><i>XEDE</i></b> Harness:       | XH-WBG (Generic Harness) |
| Special Notes / Information:      | See Diagram Over Page    |

View from back of connector  
(wire view)

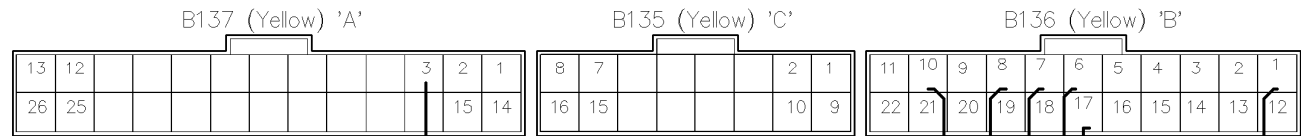

\* ONE OR BOTH OF THE CHASSIS GROUNDS MUST BE CONNECTED IF ANY OF THE FOLLOWING XEDE FEATURES ARE BEING USED:

- WATER SPRAY
- BOOST CONTROL
- AUXILIARY INJECTOR DRIVE

\*\* Red wire in 3 core shielded cable. DO NOT terminate the shield wire in the 3 core cable

\*Note: For vehicles WITH factory immobiliser fitted, use pin 8.  
For vehicles WITHOUT factory immobiliser fitted, use pin 10.

